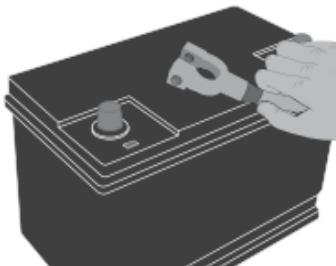
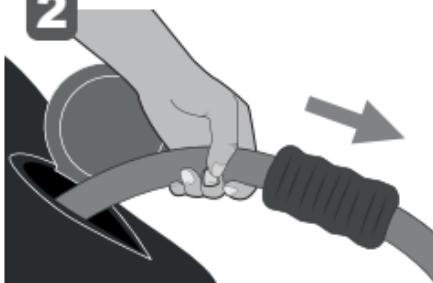
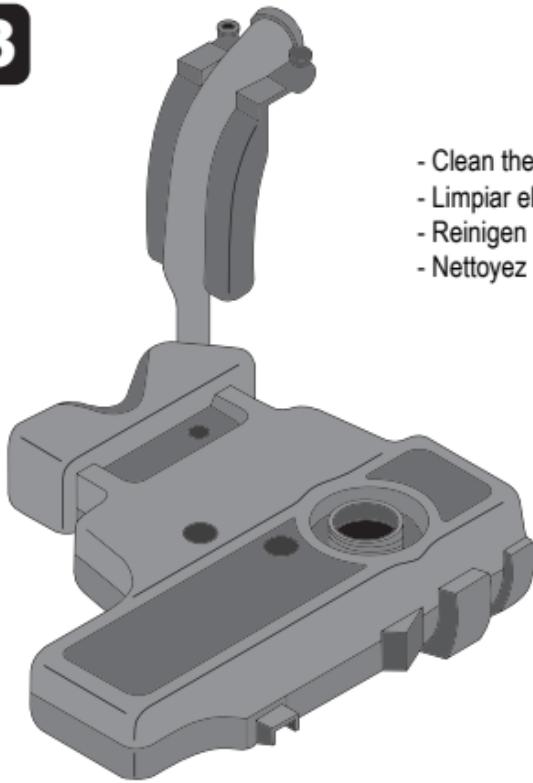


1

- Disconnect the battery earth lead.


2

- Drain the fuel of the tank.


3

- Clean the fuel tank.
- Limpiar el depósito de combustible.
- Reinigen Sie den Kraftstofftank.
- Nettoyez le réservoir de carburant.




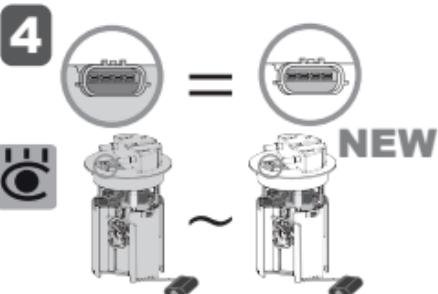

- Check that they are equivalent parts.

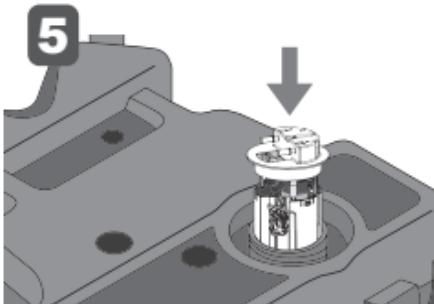

- Fit correctly the fuel pump module.

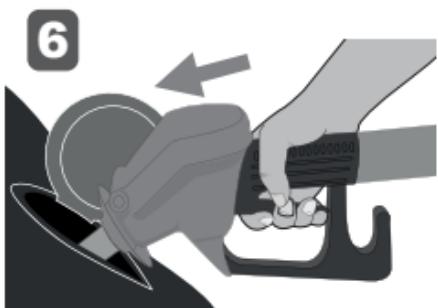

- Fill the fuel tank.



- Switch on the vehicle and check fuel level sender works correctly.



- Reset the control unit if the fuel level sender does not work correctly.



- Switch on the vehicle and check again fuel level sender works correctly.