


КА СW 71 101 040



ИНСТРУКЦИЯ ПО МОНТАЖУ комплекта электропроводки для фаркопа с 7-ми контактной розеткой (ГОСТ 9200-76)






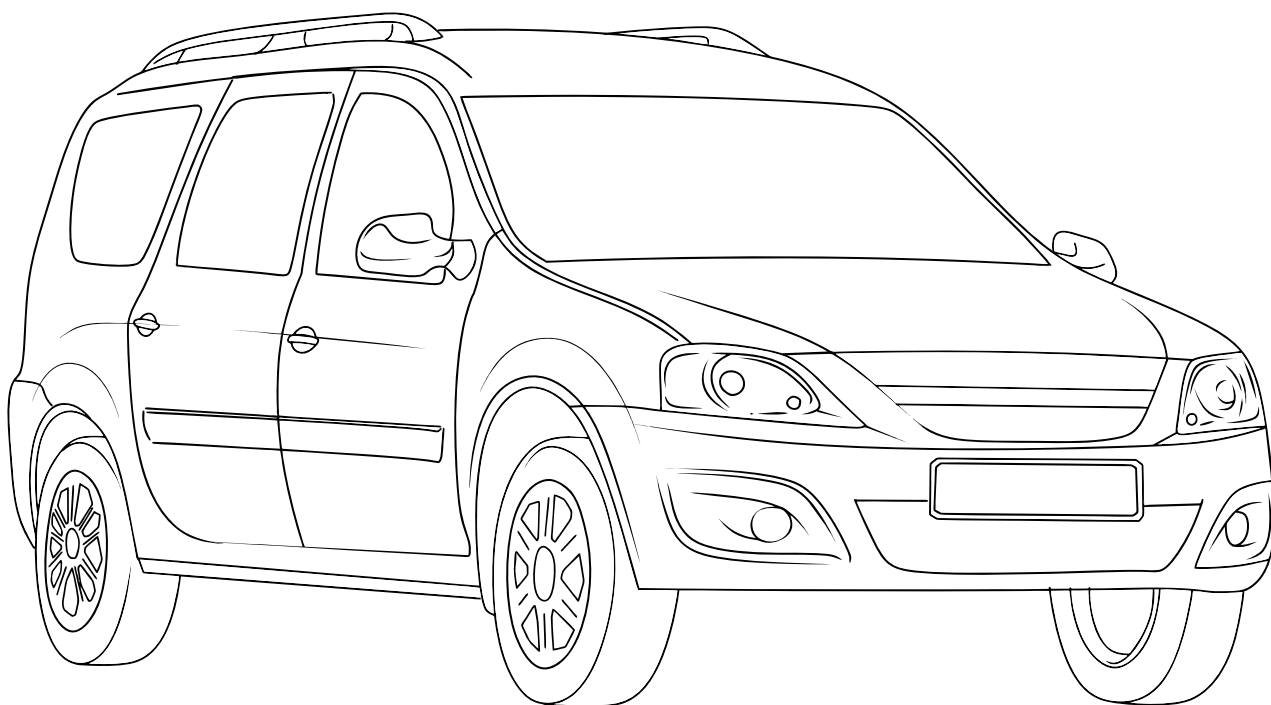


Для Lada Largus 2012- 2021


1.
2

3



!

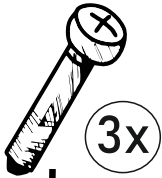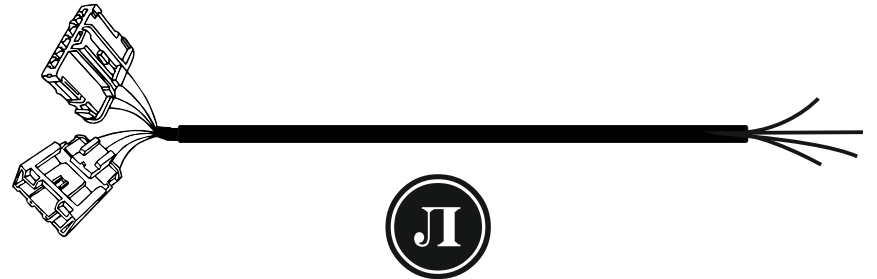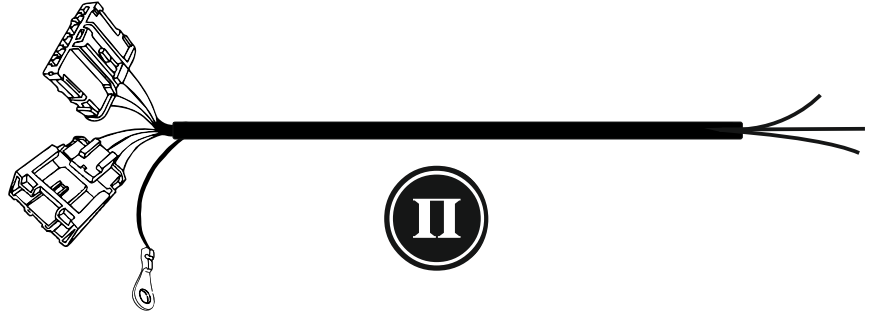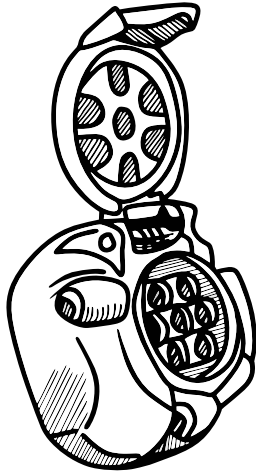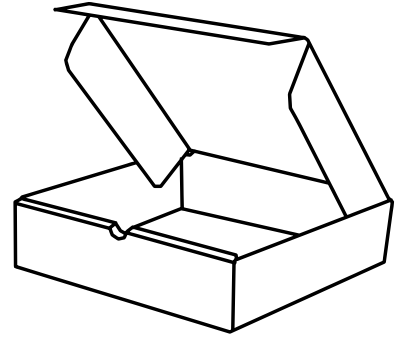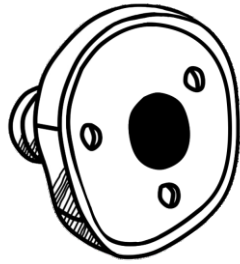




3x



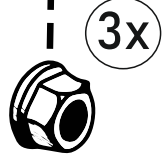





3x


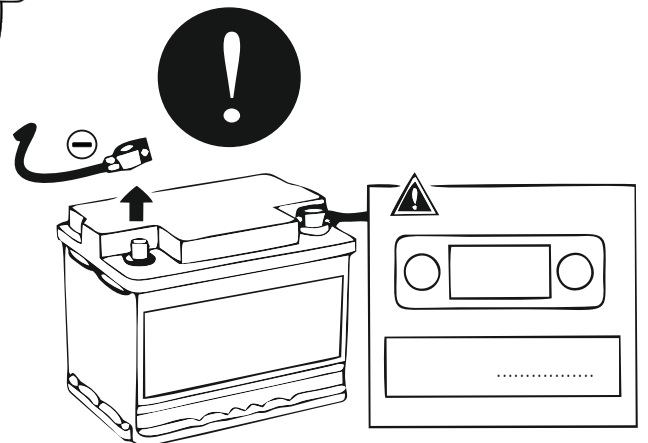
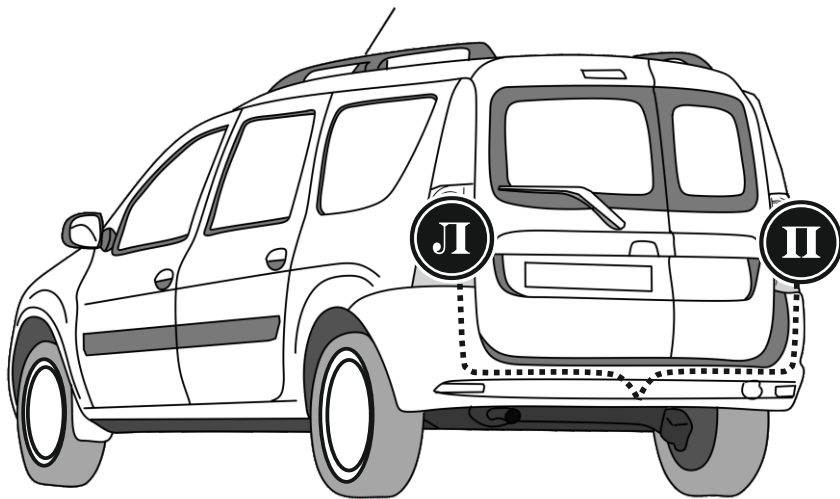


[Empty rectangular box]

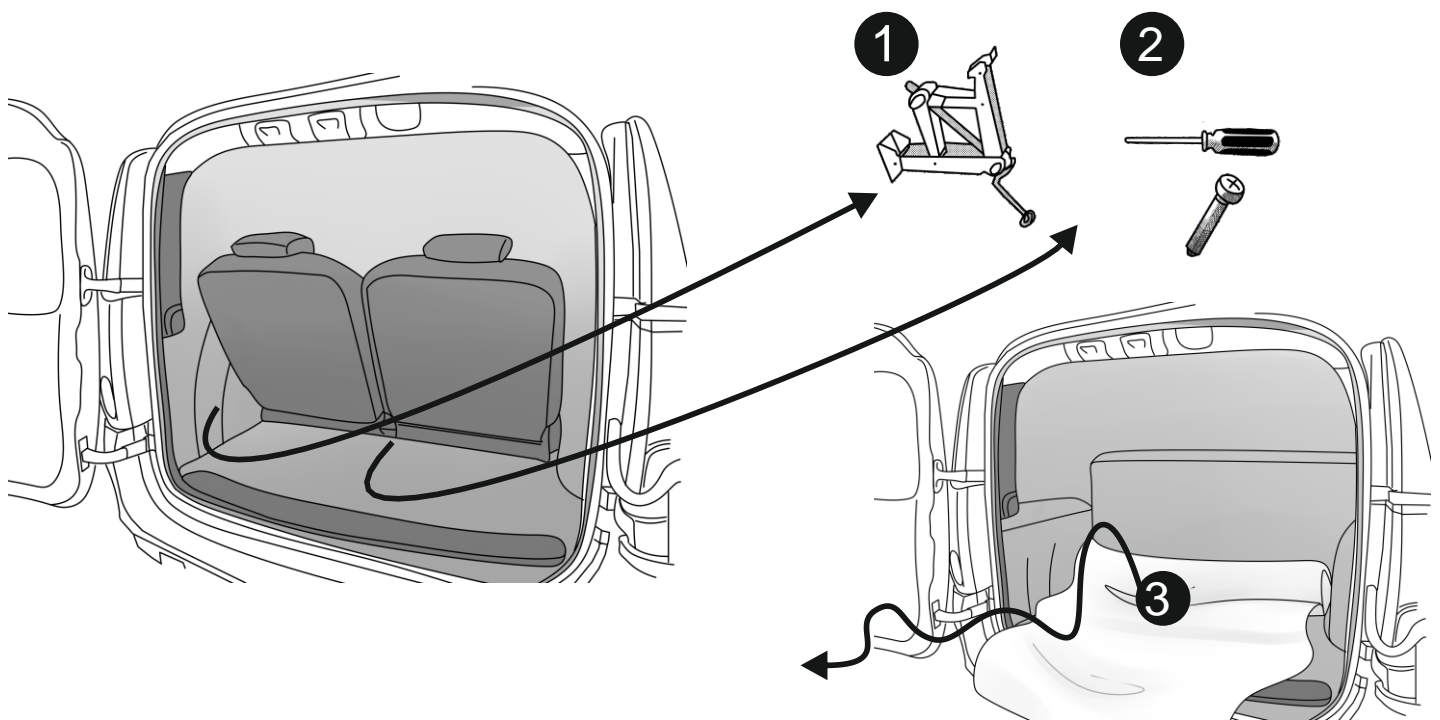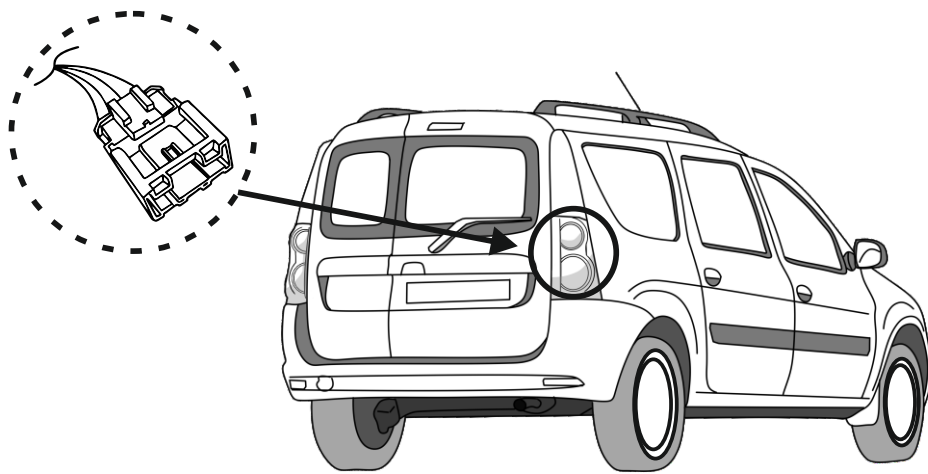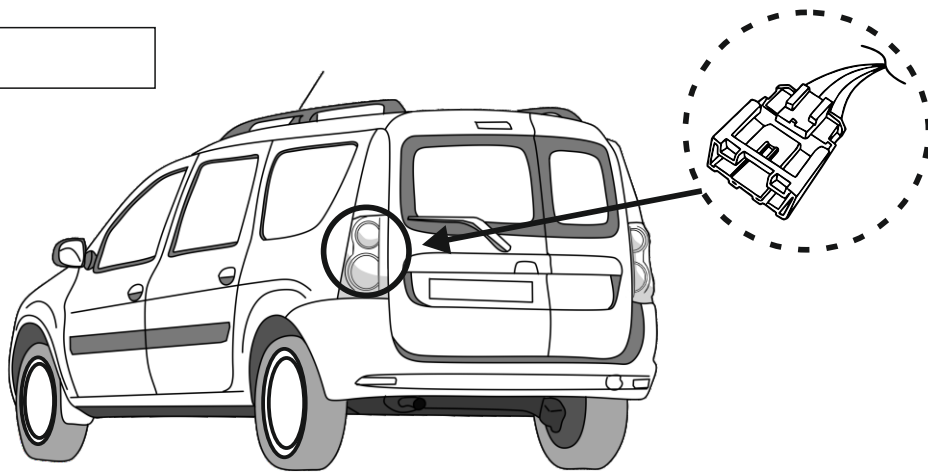


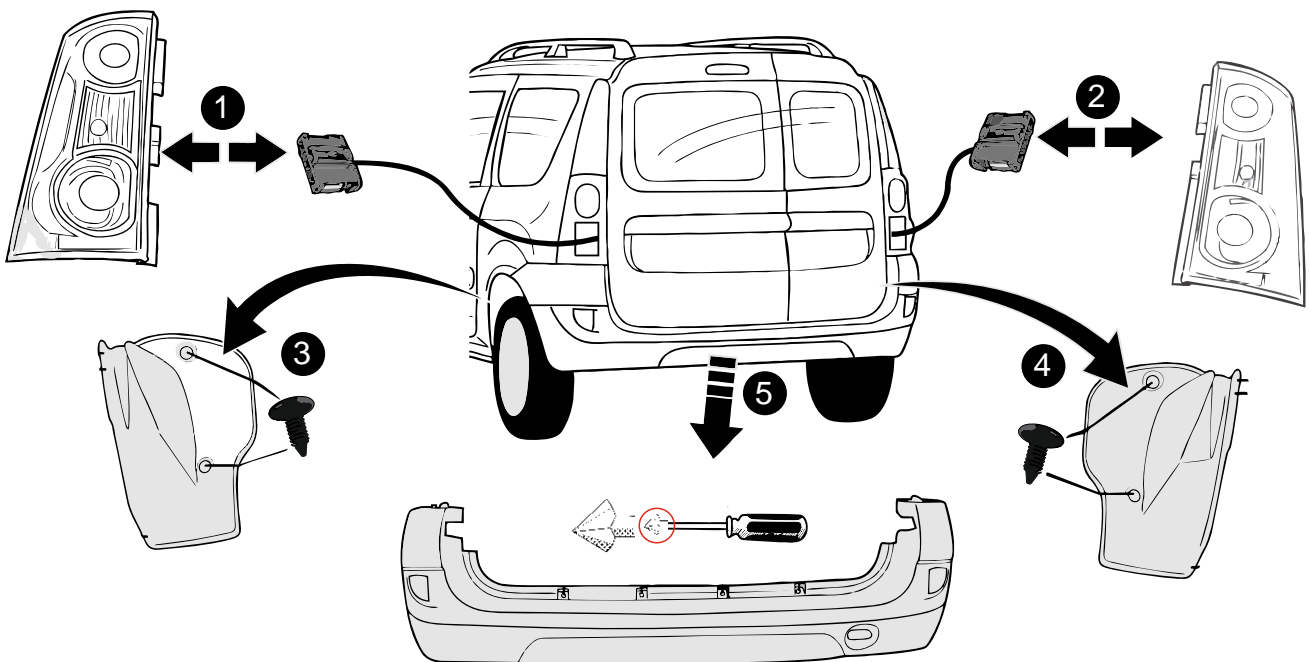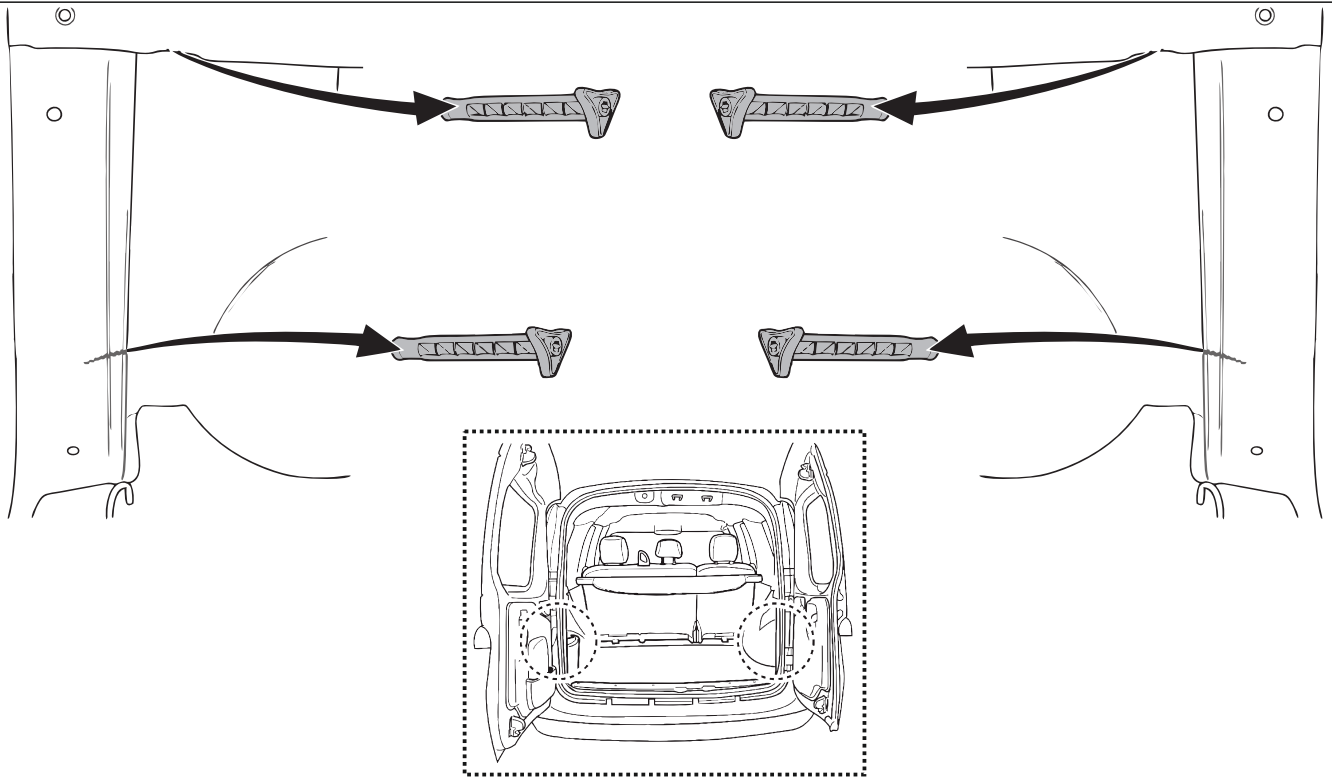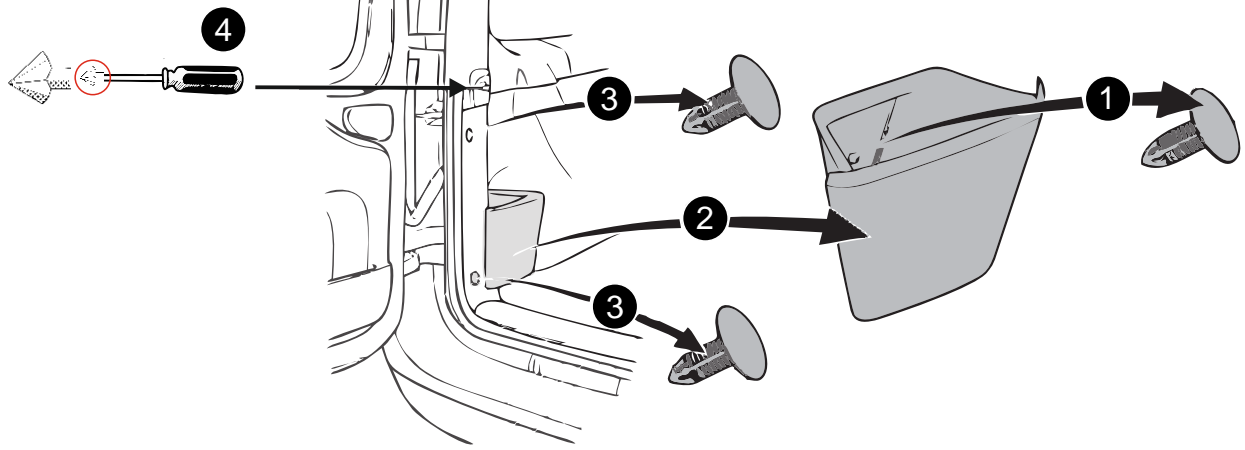

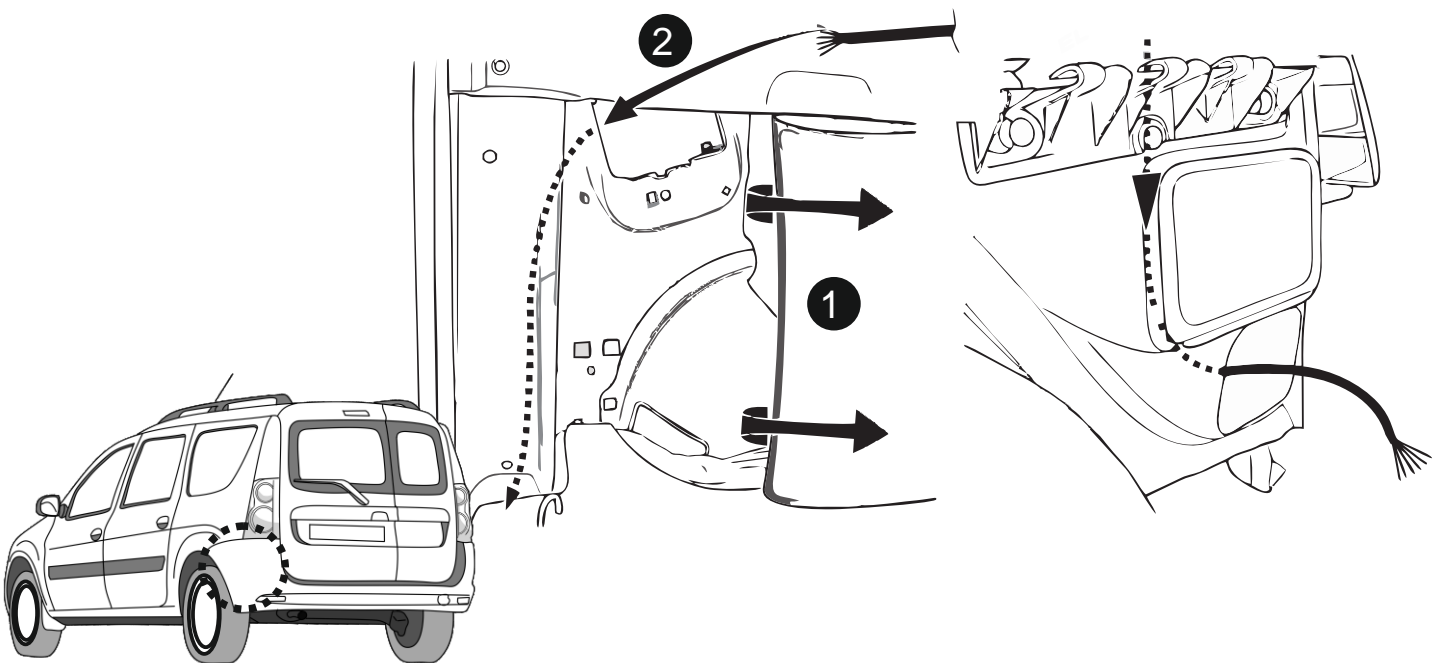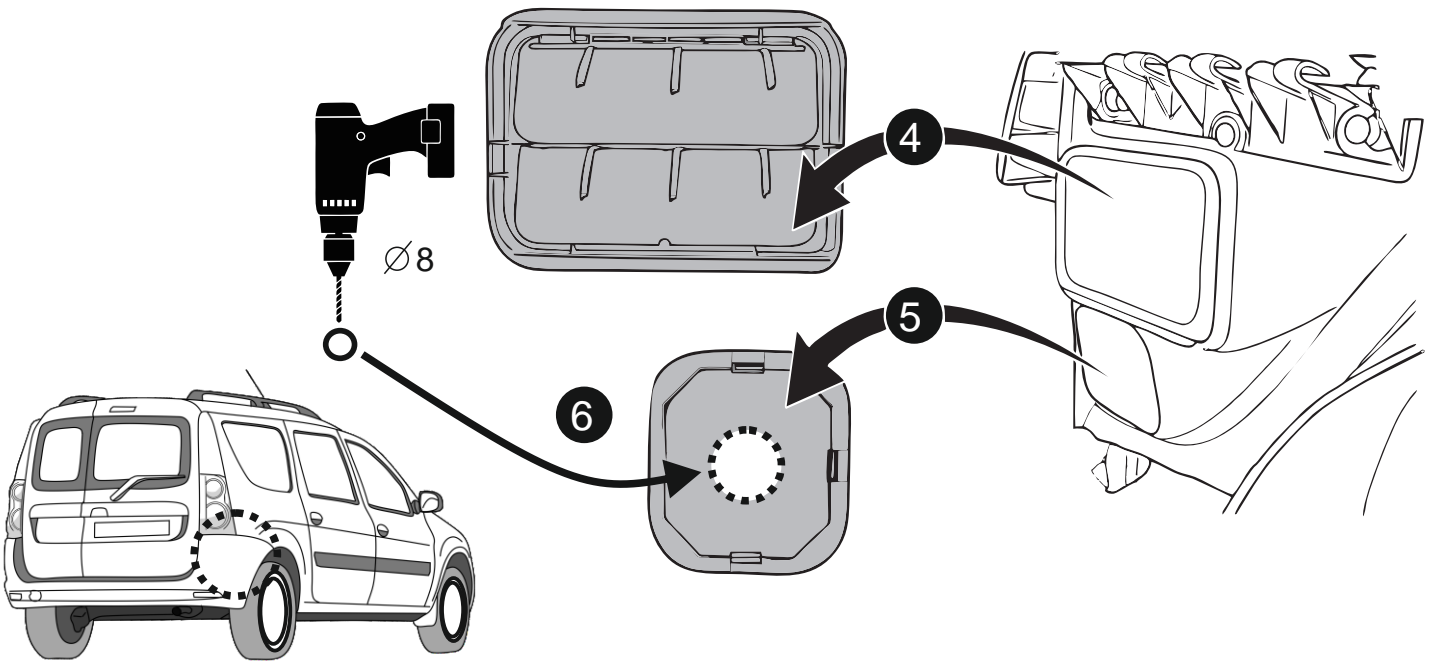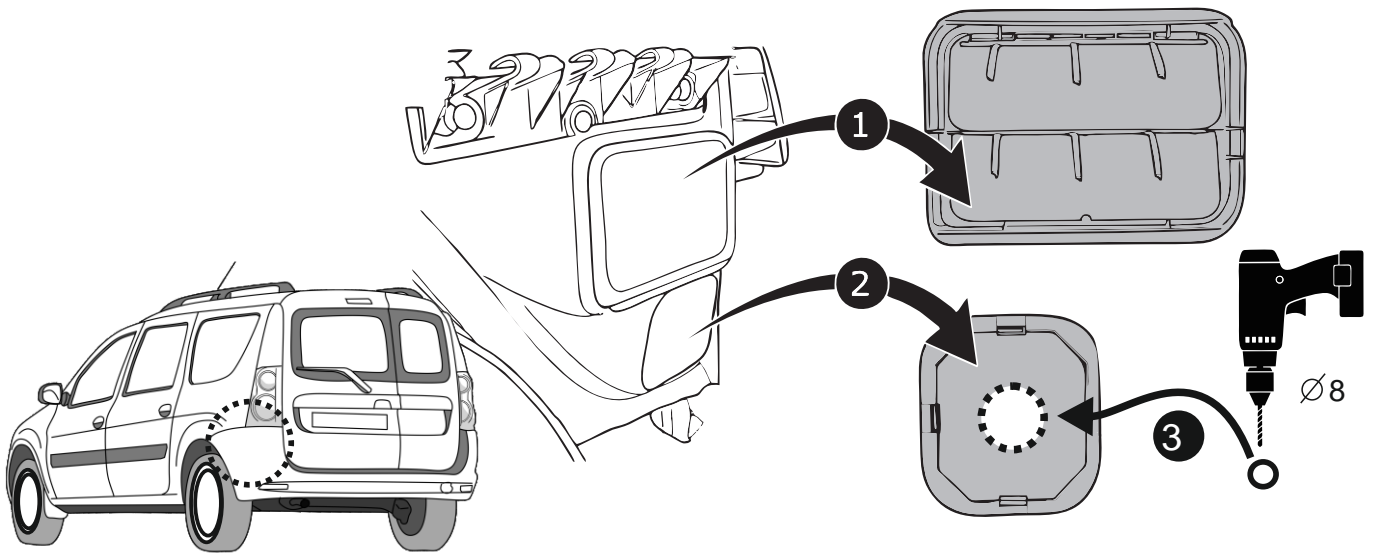

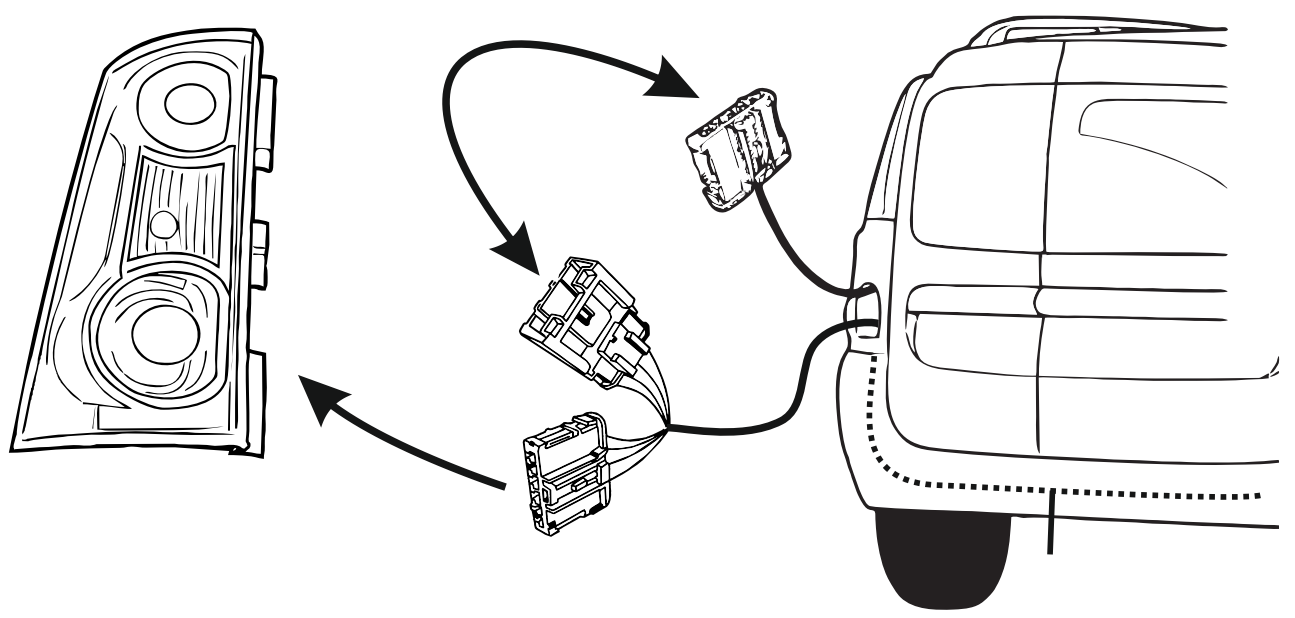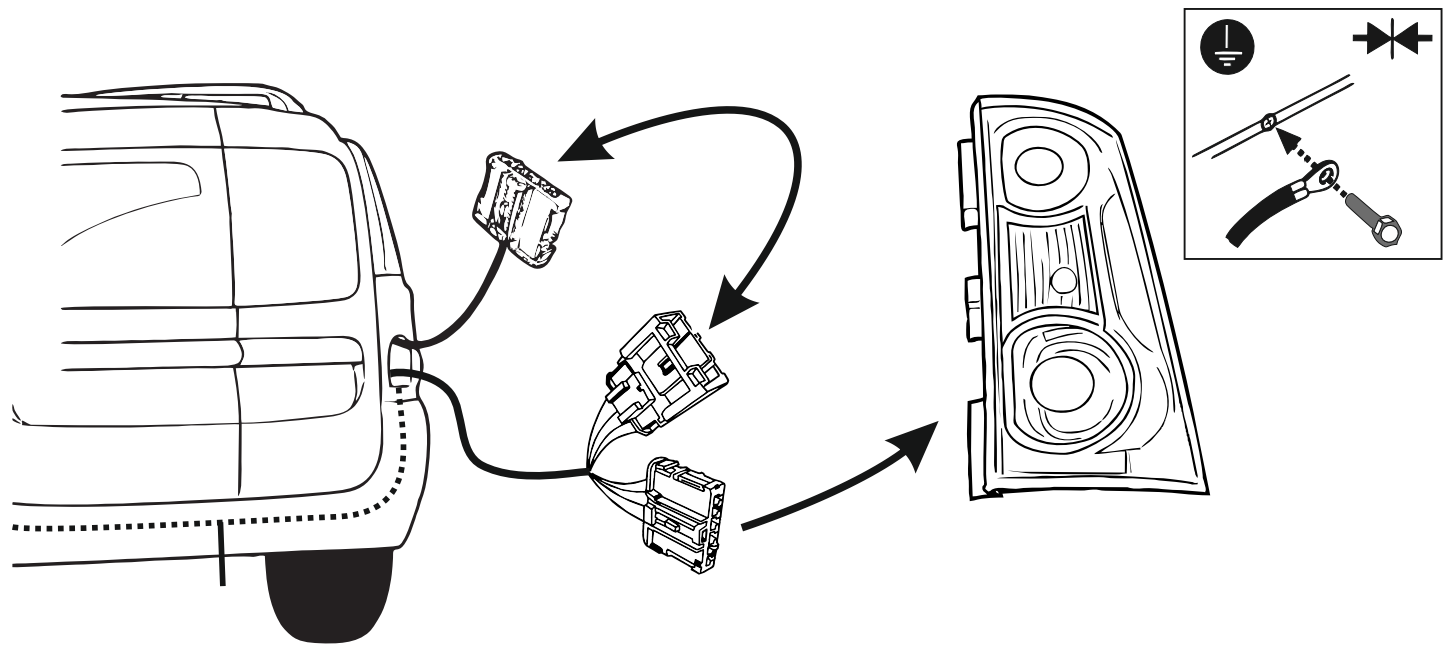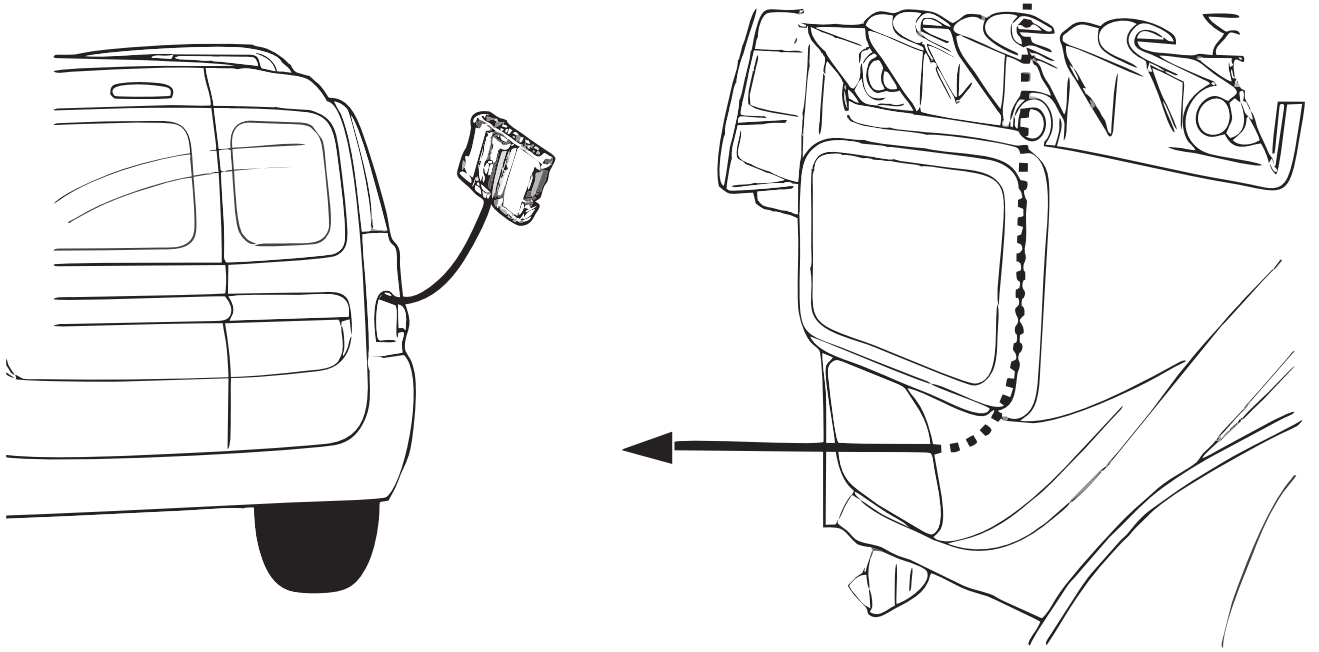

9200-76							
	1/L	2	3/31	4/R	5/58-R	6/54	7/58-L
	21W	2x21W		21W	21W	2x21W	21W
					-		

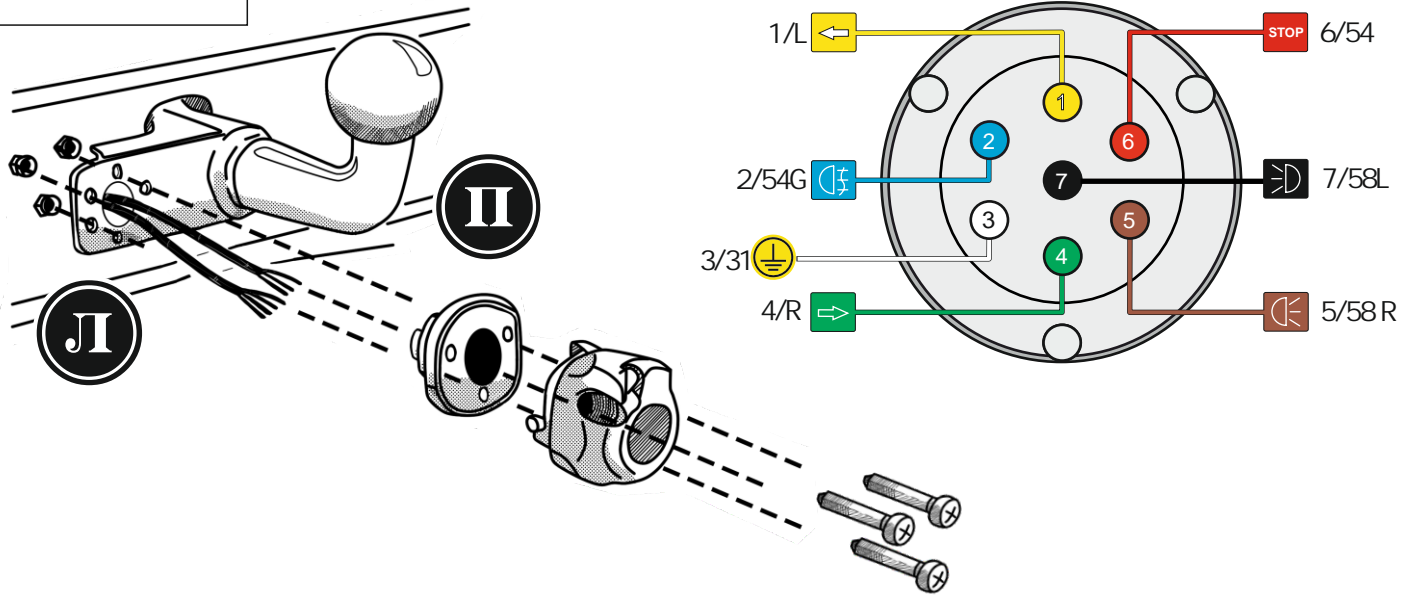

RUS

