

bosal

**Инструкция
по монтажу тягово-сцепного
устройства шарового типа 1216 Н
для автомобилей
ВАЗ-2113; -2114;
-2115**

Модель автомобиля	-2113	2003 -...
Год выпуска	-2114	1999 -...
Год выпуска	-2115	1997-...
Масса		750
Масса		75
Масса		7,6



462800,

т. (35363) 7-05-06

ф. (35363) 7-13-20

т. (495) 785-66-07


www.bosal-autoflex.ru

18

« - »:	(8182) 22-48-15
" - "	" 8(8442) 98-74-98
" - "	" 8(343) 379-39-89, 373-42-73
" - "	" 8(343) 26-88-308
" - "	" 8(3952) 710-194
" - "	" 8(495) 777-54-59
" - "	" 8(495)745-79-11
" - "	" 8(495) 788-95-97
" - "	" 8(495) 720-51-03
" - "	" 8(3532) 57-99-85
" - "	" 8-905-899-5012
" - "	" 8(383) 291-59-60
" - "	" 8(831) 279-53-24
" - "	" 8(3422) 98-27-20
" - "	" 8(342) 220-87-87
" - "	" 8-927-002-90-06
" - "	" 8(3462) 24-00-44
" - "	" 8(3842) 21-14-76
" - "	" 8-902-940-4151
" - "	" 8(3452) 32-22-12, 41-52-62
" - "	" 8-961-213-0278
" - "	" 8-917-347-1700
" - "	" 8(351) 269-44-75, 900-72-73
" - "	" 8(3512) 773-76-91


41.55-2005.

Ø11
 Ø 18 ()
 10 80,
 L=53
 Ø 11 ()
 L=53
 Ø 18
 Ø 11 ()
 10 30. 2

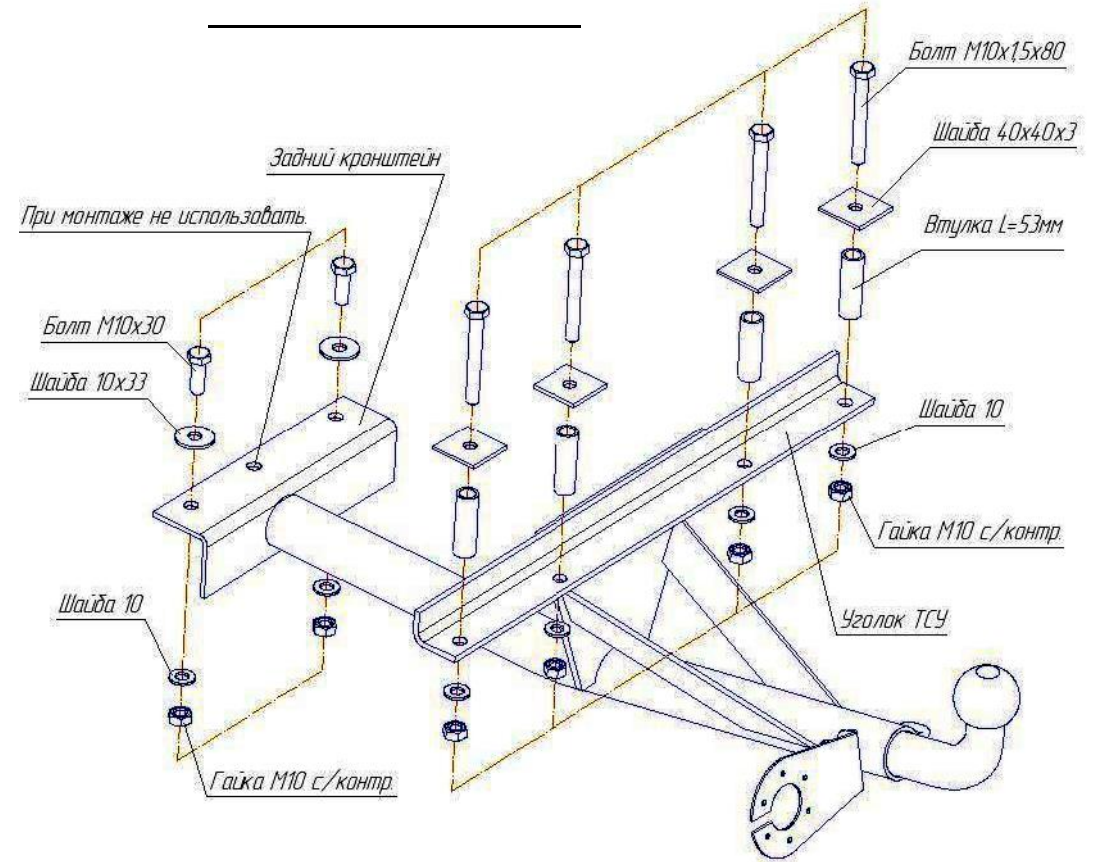

1			
2			
3			
4			
5			
6			
7			

	1
	1
	1

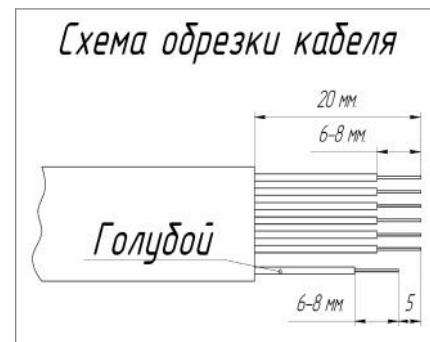

	3
10 30	2
10 80	4
10 /	6
10 ()	2
10	6
10 40 40 3	4
L = 53	4
	1
130	1
	1
	1