

Product 512636



512636 Active holder with cig-plug With tilt swivel.

Use an active holder for your Tab 4 while driving and you will always have a freshly charged battery! The holder provides a neat and comfortable installation - safe and convenient. The holder is equipped with a cig-plug for connection to the vehicle's 12 Volt socket.

The holder is mounted onto a tilt swivel. This means that you can adjust the angle in order to avoid light reflection on the screen. You can easily switch between portrait and landscape mode by turning the holder into desired position. It is easy to put the Tab 4 into place in the holder, and to take it with you when leaving the car.

Tablets (Surfpads) should not be installed onto a car's dashboard if they block the view or block key controls. ProClip (Brodit's vehicle mounting bracket) is designed for installation of smaller devices like mobile phones and GPS devices, ProClip is not designed for large devices like tablets. In some vehicles the ProClip has an extra firm fit and can then be used also for installation of a tablet. If you want to place a tablet onto the car's dashboard, each combination of tablet-car must be examined in detail by you in order to determine if such an installation is possible in the specific case. Consideration should be given to the position and how firmly the ProClip is in place, as well as the size of the tablet you wish to use. Brodit will not give any recommendations for such installations.

An installation of a tablet onto a vehicle's dashboard is always done on the customer's own responsibility. Brodit recommends to use tablets on the car's headrest, installed onto a Brodit headrest mount.

EAN: 7320285126367

Item no 512636 fits:

- Samsung Galaxy Tab 4 7.0 SM-T230 (For all countries)
- Samsung Galaxy Tab 4 7.0 SM-T231 (For all countries)
- Samsung Galaxy Tab 4 7.0 SM-T235 (For all countries)

INSTALLATION INSTRUCTIONS


1.



2.



3.

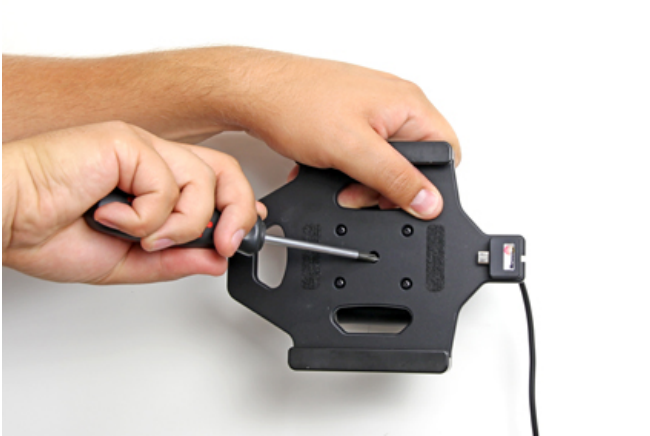

4.



Please read all of the instructions and look at the pictures before attaching the holder.

1. Loosen the screw in the center of the holder so you can remove the tilt swivel attaching plate on the back.
 2. Place the attaching plate onto the desired position. Screw the attaching plate into place with the enclosed screws.
 3. Place the holder over the attaching plate so the screw fits in the hole in the tilt swivel. Tighten the screw until the holder is firmly in place, but still can be adjusted. Slide the device sideways into the holder until you hear / feel it snaps into place.
 4. The holder is in place.
-